RHF76-052

RHF76-052 Hardware Design Guide

V0.1

Document information

Info	Content
Keywords	Ai-Thinker, RHF76-052, UART, Modem, Upgrade, Hardware, Reference design
Abstract	This document is a description for HW of RHF76-052 UART modem.

Content

Content	2
Figures	3
Tables	
1 Introduction	
2 GPIO description of the RHF76-052 modem	1
3 Reference design and description	3

Δ	i_'	Т	h	in	ke	r
М		•			Nt	; I

F	iq	u	re	25
-	- 3	,		_

Figure 1 RHF76-052 Reference Des	gn3
----------------------------------	-----

_		_			
Δ	Ι.	_ I	n	ın	ker
_					NGI

Table	S

Table 2-1 GPIO do	escription1	1
-------------------	-------------	---

1 Introduction

Ai-Thinker™ LoRaWAN™ UART modem RHF76-052 is LoRaWAN compatible device, supports LoRaWAN communication. These two modems are based on the RHF76-052 module and an embedded LoRaWAN stack. Customer could use a host MCU to control this modem with simple AT command. The advanced and simple command interface offers rapid time to market. This document is targeted to help customer to set their hardware platform quickly with RHF76-052 UART modem. The only difference between the two modems is the boot loader interface. RHF76-052

RHF76-052 — UART AT command, UART bootloader

2 GPIO Definition

use UART bootloader for firmware upgrade.

Table 2-1 GPIO description

Number	Name	Type	Description and application
1	VCC	-	Supply voltage for the module
2	GND	-	Ground
3	PA8	1/0	GPIO_PA8 ⁽²⁾
4	PA9	1/0	GPIO_PA9; UART1_TX of Modem for Firmware upgrade(RHF76-
			052)
			GPIO_PA10;
5	PA10	I/O	UART1_RX of Modem for Firmware upgrade(RHF76-
			052)
6	NSS	1/0	GPIO_PB12
7	SCK	1/0	GPIO_PB13
8	MISO	1/0	GPIO_PB14
9	MOSI	1/0	GPIO_PB15
10 USAF	USART1_CTS	I/O	USART1_CTS ⁽¹⁾ from MCU; GPIO_PA11;
	10 03AKT1_CT3	1,0	USB_DM for Firmware upgrade(RHF76-052AN)
11	11 USART1 RTS		USART1_RTS ⁽¹⁾ from MCU; GPIO_PA12;
11	03AKT1_KT3	I/O	USB_DP for Firmware upgrade(RHF76-052AN)
12	SWDIO	I/O	SWDIO of SWIM for program download;
13	SWCLK	I/O	SWCLK of SWIM for program download;
14	PA15	1/0	Boot_EN (GPIO_PA15), Connect to a toggle switch to enable DFU mode for FW upgrade.

Number	Name	Туре	Description and application
15	PB3	I/O	GPIO_PB3
16	PB4	I/O	Status LED (GPIO_PB4) trigger, connect to an
10	7 04	1,0	external LED to show status of LoRaWAN processing
17	NC	1	Connected to Ground
18	NC	-	Connected to Ground
19	NC	-	Connected to Ground
20	PA3/ADC3	I/O	GPIO_PA3
21	PB5	1/0	Status LED (GPIO_PB5) trigger, connect to an
21	rbs	1/0	external LED, Reserved
22	USART1_TX	1/0	USART1_TX of Modem, connect to RXD of Host MCU
23	USART1_RX	I/O	USART1_RX of Modem, connect to TXD of Host MCU
24	I2C_SCL	1/0	GPIO_PB8
25	I2C_SDA	I/O	GPIO_PB9
26	PC13/Wkup2	1/0	GPIO_PC13
27	NRST	I	Reset trigger input of Modem
28	PA0/AD0	I/O	GPIO_PA0
29	GND	-	Ground
30	RFIO_HF	ı	RF input/output in high band, i.e. 868MHz/915MHz
31	GND	ı	Ground
32	RFIO_LF	-	RF input/output in low band, i.e. 434MHz/470MHz
33	GND	ı	Ground

Note: (1) Optional handshake lines are supported in future firmware releases.

(2) GPIO couldn't be controlled by Host MCU by UART in current version.

3 Hardware Design Reference

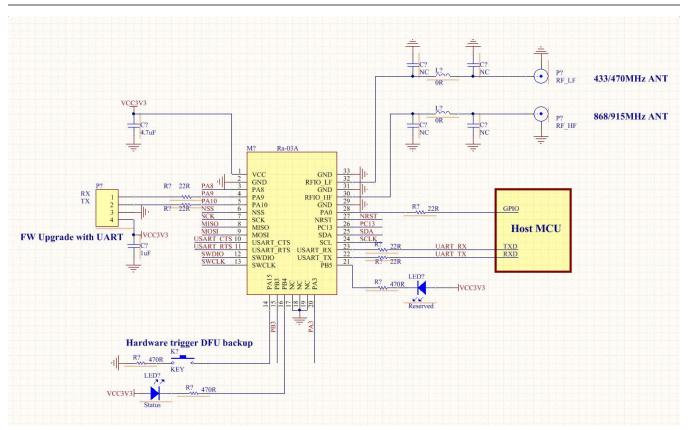


Figure 1 RHF76-052 Reference Design

Hardware design description:

- 1) VCC operation range: +1.8V to +3.6V
- 2) Pin22 and Pin 23 of the Modem would be used as UART port, please connect to Host MCU. Pin22 should be connected to RXD of Host MCU, and Pin23 should be connected to TXD of Host MCU.
- 3) For RHF76-052: Pin4 and Pin5 of the Modem would be used as FW upgrade port based on UART connection. Pin4 should be connected to RXD of Host, and Pin5 should be connected to TXD of Host.
- 4) Pin14 (GPIO_PA15) would be used to enable the DFU mode for FW upgrade. Please connect it to a toggle switch to achieve DFU enable function via a hardware way.
 - Note: Customer could also use a SW way with AT command to access into DFU mode.
- 5) Pin16 would be used to show LoRaWAN processing status. Please connect this pin to a LED if need.

 This LED would blink when transmit or receive a message in LoRaWAN mode.
- 6) Pin21 would be used to be reserved for LED connection.
- 7) RHF76-052 UART modem support both low band (434MHz/470MHz) and high band (868MHz/915MHz). When use an internal antenna with mismatch impedance, a π topology for antenna matching is strongly suggested.

V0.1 2017-05-02 + Initial

Please Read Carefully:

Information in this document is provided solely in connection with Ai-Thinker products. Ai-Thinker reserve the right to make changes, corrections, modifications or improvements, to this document, and the products and services described herein at any time, without notice.

All Ai-Thinker products are sold pursuant to Ai-Thinker's terms and conditions of sale.

Purchasers are solely responsible for the choice, selection and use of the Ai-Thinker products and services described herein, and Ai-Thinker assumes no liability whatsoever relating to the choice, selection or use of the Ai-Thinker products and services described herein.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted under this document. If any part of this document refers to any third party products or services it shall not be deemed a license grant by Ai-Thinker for the use of such third party products or services, or any intellectual property contained therein or considered as a warranty covering the use in any manner whatsoever of such third party products or services or any intellectual property contained therein.

UNLESS OTHERWISE SET FORTH IN Ai-Thinker'S TERMS AND CONDITIONS OF SALE Ai-Thinker DISCLAIMS ANY EXPRESS OR IMPLIEDWARRANTY WITH RESPECT TO THE USE AND/OR SALE OF Ai-Thinker PRODUCTS INCLUDING WITHOUT LIMITATION IMPLIEDWARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (AND THEIR EQUIVALENTS UNDER THE LAWSOF ANY JURISDICTION), OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

Ai-Thinker PRODUCTS ARE NOT DESIGNED OR AUTHORIZED FOR USE IN: (A) SAFETY CRITICAL APPLICATIONS SUCH AS LIFE SUPPORTING, ACTIVE IMPLANTED DEVICES OR SYSTEMS WITH PRODUCT FUNCTIONAL SAFETY REQUIREMENTS; (B) AERONAUTIC APPLICATIONS; (C) AUTOMOTIVE APPLICATIONS OR ENVIRONMENTS, AND/OR (D) AEROSPACE APPLICATIONS OR ENVIRONMENTS. WHERE Ai-Thinker PRODUCTS ARE NOT DESIGNED FOR SUCH USE, THE PURCHASER SHALL USE PRODUCTS AT PURCHASER'S SOLE RISK, EVEN IF Ai-Thinker HAS BEEN INFORMED IN WRITING OF SUCH USAGE, UNLESS A PRODUCT IS EXPRESSLY DESIGNATED BY Ai-Thinker AS BEING INTENDED FOR "AUTOMOTIVE, AUTOMOTIVE SAFETY OR MEDICAL" INDUSTRY DOMAINS ACCORDING TO Ai-Thinker PRODUCT DESIGN SPECIFICATIONS. PRODUCTS FORMALLY ESCC, QML OR JAN QUALIFIED ARE DEEMED SUITABLE FOR USE IN AEROSPACE BY THE CORRESPONDING GOVERNMENTAL AGENCY.

Resale of Ai-Thinker products with provisions different from the statements and/or technical features set forth in this document shall immediately void any warranty granted by Ai-Thinker for the Ai-Thinker product or service described herein and shall not create or extend in any manner whatsoever, any liability of Ai-Thinker.

Ai-Thinker and the Ai-Thinker logo are trademarks or registered trademarks of Ai-Thinker in various countries.

Information in this document supersedes and replaces all information previously supplied.

The Ai-Thinker logo is a registered trademark of Ai-Thinker. All other names are the property of their respective owners.

© 2015 Ai-Thinker - All rights reserved

http://www.Ai-Thinker.com