


# AiPi-Cam-U Firmware User Guide

1.

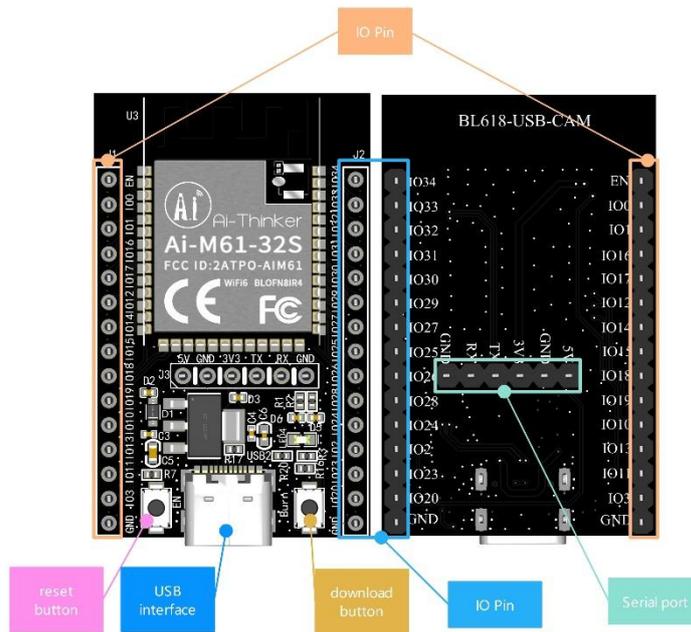

## Firmware burning

### 1.1 Serial connection

USB转TTL	小安派-Cam-U
VCC	5V
GND	GND
TXD	RXD
RXD	TXD

### 1.2 Burn

Burning tool Download: [https://docs.ai-thinker.com/\\_media/bouffalolabdevcube-v1.8.3.zip](https://docs.ai-thinker.com/_media/bouffalolabdevcube-v1.8.3.zip)

Firmware address: [https://docs.ai-thinker.com/\\_media/software.zip](https://docs.ai-thinker.com/_media/software.zip)

After the burning tool starts, press and hold down the "download button" and then press the "reset button" and release it to enter the burning mode.

The steps are as follows:



## 2. Use Steps

### 2.1 USB Camera

The USB camera is connected through the Type-C port and can be connected through the Type-C to USB-A bus.

### 2.2 Use Steps

Power-on, use mobile phone or computer to connect to hot spot: AiPi-Cam, password: 12345678, open the web page and enter the website 192.168.169.1. Click Start Stream to check whether there is a camera image, as shown below:

